



MADERRA

Hidden Bookshelf Doors

INSTALLATION INSTRUCTIONS

Please read this entire manual before you begin

⚠ WARNING!

This product contains small parts that can be a choking hazard. Do not let children play with any of these small parts! Keep children away from the work area during installation.

⚠ CAUTION!



This product is intended to be installed by professional installation contractors or persons familiar with the tools and methods required for this installation. If you are not sure about your ability to perform this installation, you must contact a professional. Maderra is not responsible for damage or injury caused by incorrect installation or improper use.

⚠ CAUTION!

Do not use this product in anyway, or for any purpose, that is not specifically described in these instructions. Maderra is not responsible for damage or injury caused by incorrect installation or improper use.

Step-1

Screw Roller Guide to your door Casing. Do not let the Roller Guide hang in the air. Let it touch the door and screw it in the Door Casing.

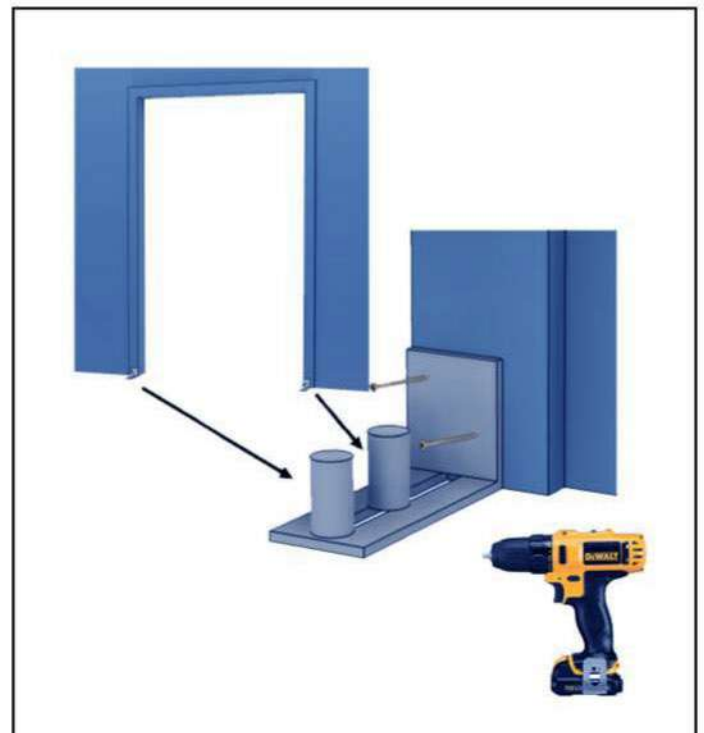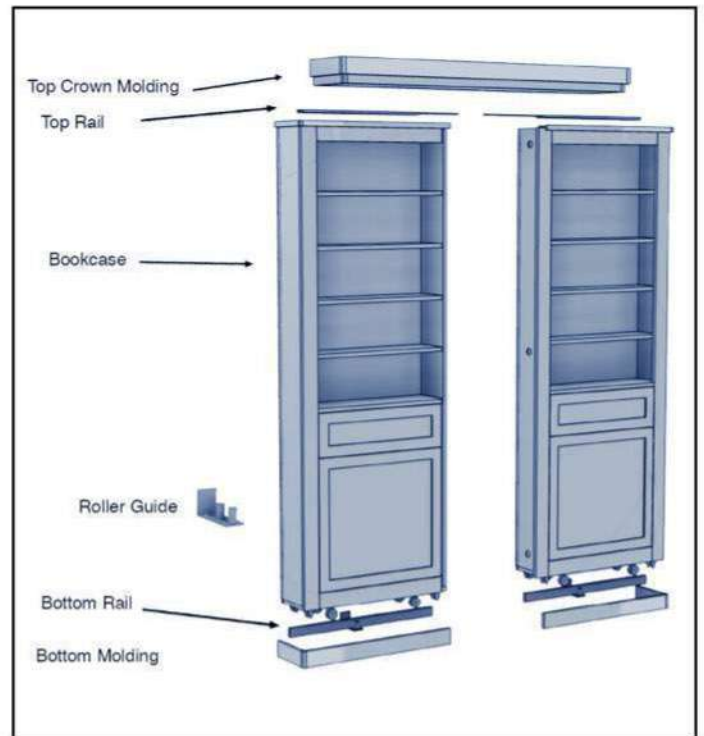

Step-2

Place the bookcase and against your door opening




When lifting the bookcase up against the wall, place the bottom rail in the roller guide.



Step-3

Rest the top crown molding on top of your bookcase

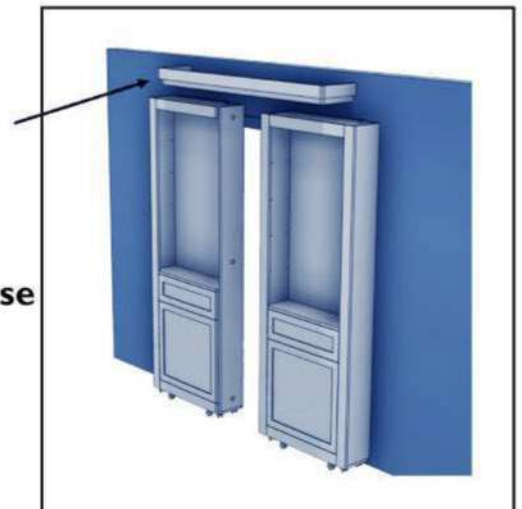

⚠ CAUTION!

Two people required for this whole part of the installation process

⚠ CAUTION!


Keep children away from the work area during installation

Step-4

Carefully slide both bookcases to the edge of the top crown molding to help facilitate the placing of the top rails.



Connect the top rail of the crown molding to the rail on the uppercase.

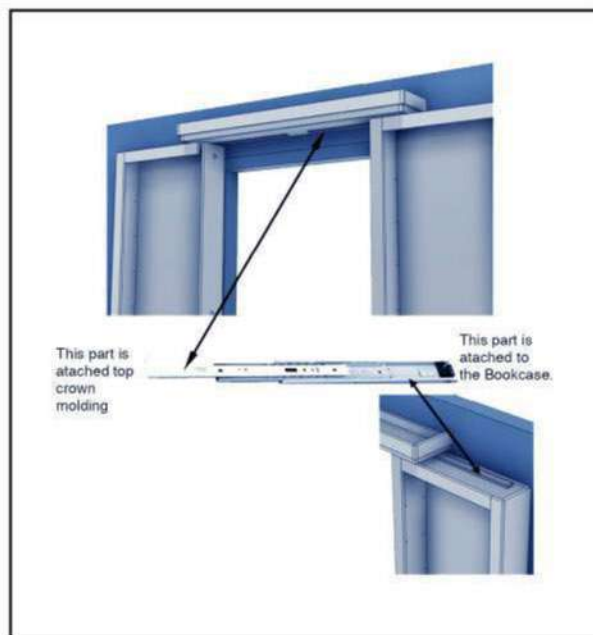

⚠ WARNING!

Maderra recommends a licensed and trained electrician whenever wiring is involved.

⚠ CAUTION!

Two people required for this whole part of the installation process

⚠ CAUTION!

Keep children away from the work area during installation

Step-5

Once both top tails have been connected, slowly close the two bookcases together.



A. Place the bookcase in the middle of your door entry.

B. Find the studs in your wall and mark them with a pencil

B. Screw the top crown molding into the studs in the wall.



⚠️ WARNING!

Maderra recommends a licensed and trained electrician whenever wiring is involved.

⚠️ CAUTION!

Two people required for this whole part of the installation process

⚠️ CAUTION!

Keep children away from the work area during installation

Step-6

Nail Trim pieces to cover gap between bookcase and upper crown molding.

Note: Trim pieces need to attach to the bookcase and not the upper crown molding.



Step-7

Nail the bottom molding pieces to cover gap between bookcase and the floor.

Note: Make sure the bottom molding does not drape the floor. Leave a gap so that the door will slide without scrapping the floor.



⚠️ WARNING!

Maderra recommends a licensed and trained electrician whenever wiring is involved.

⚠️ CAUTION!

Two people required for this whole part of the installation process

⚠️ CAUTION!

Keep children away from the work area during installation